


How to Delete Alert Message


Here is the instruction to show you how to delete Alert Message from Owlet Home Video Doorbell.

Step 1: Open the ToSee APP


Step 2: Click the on top left

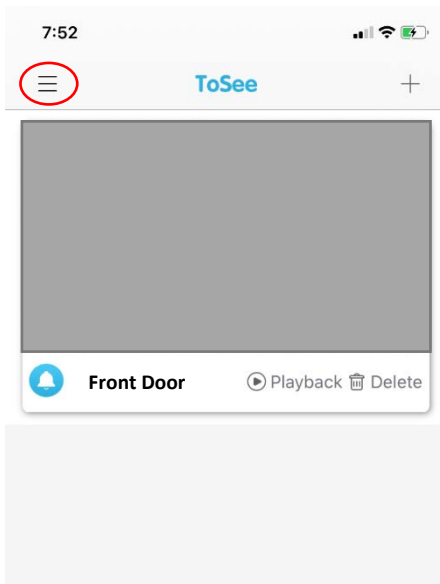

Step 3: Select Message

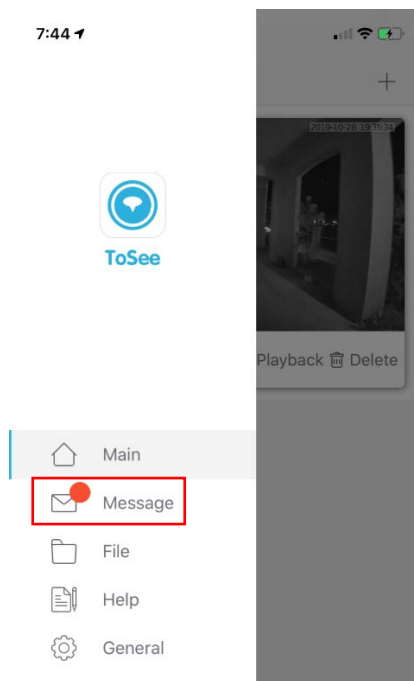

Step 4: Click 

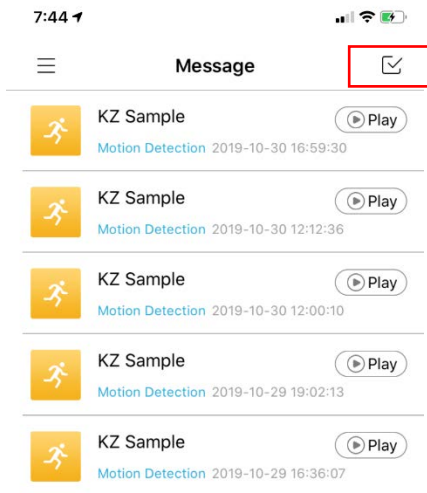

Step 5: Select the message you want to delete and click Delete button on bottom right.

